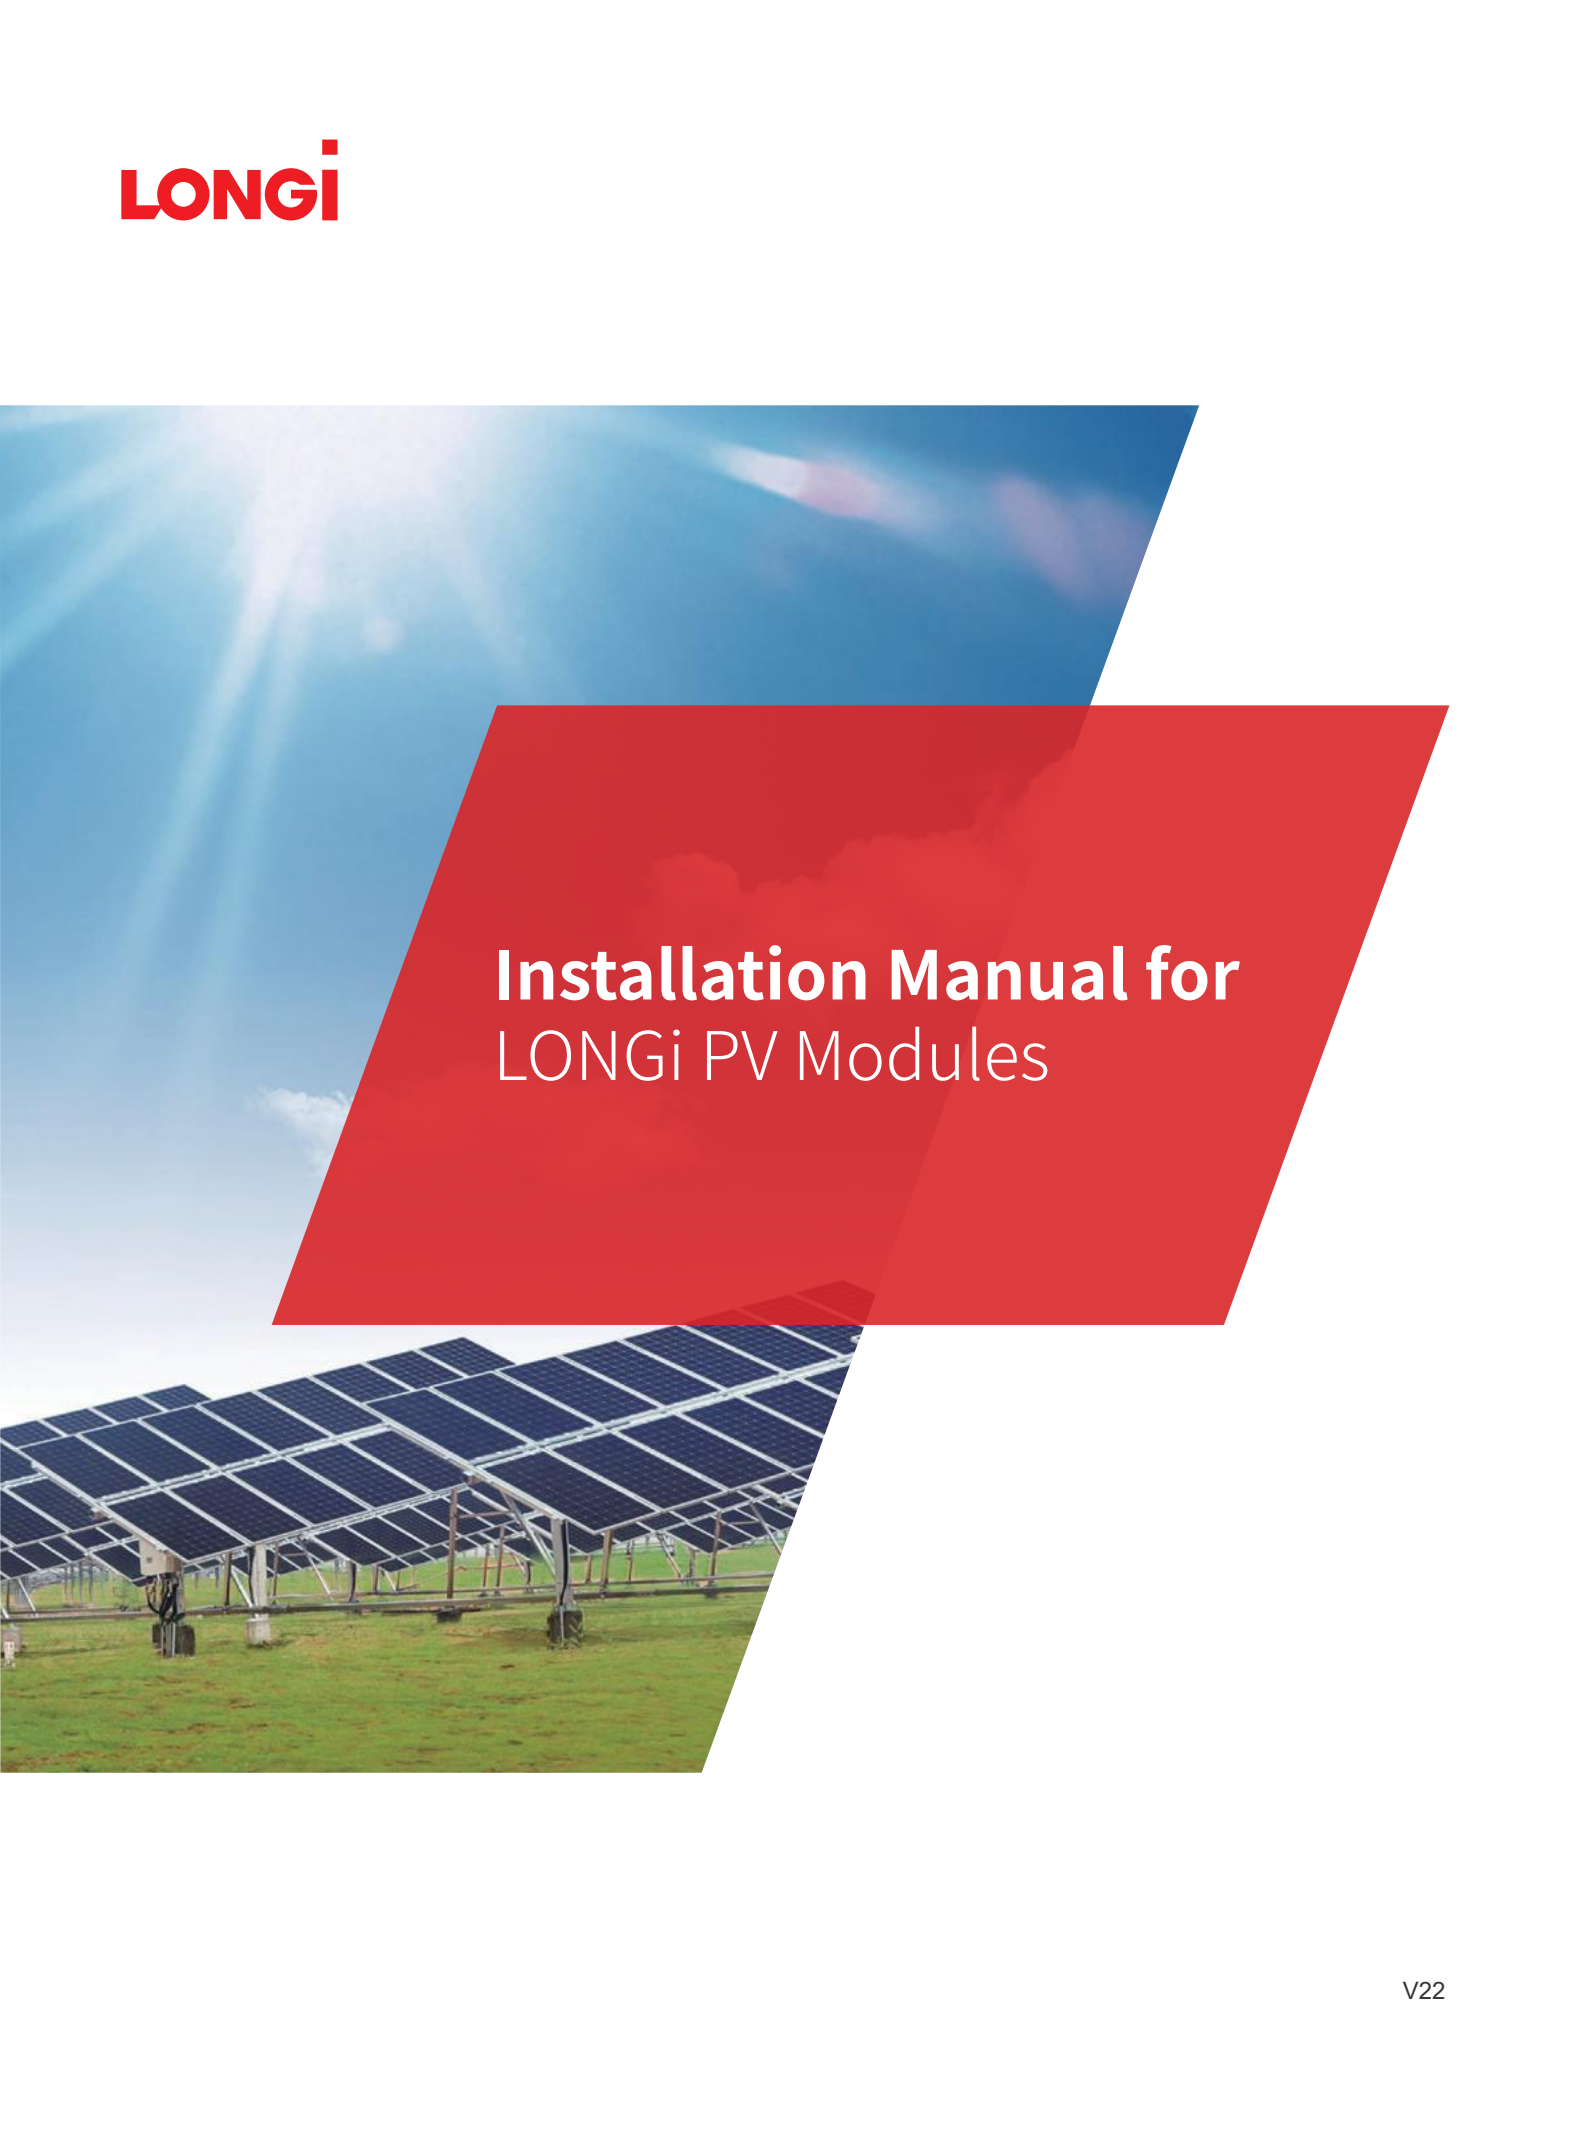


The background of the cover features a photograph of a solar farm. Rows of dark blue photovoltaic modules are mounted on metal racks in a grassy field. The sky is bright blue with wispy white clouds, and the sun is visible in the upper left corner, creating a lens flare effect. A large, semi-transparent red parallelogram is overlaid on the right side of the image, serving as a backdrop for the title text.

Installation Manual for LONGi PV Modules

Module Category		Module Type	Certification Status
Bifacial Module	Hi-MO5	LR5-72HBD-xxxM*	IEC/UL
		LR5-72HBD-xxxM* (Ice-Shield)	IEC/UL
		LR5-78HBD-xxxM*	IEC/UL
	Hi-MO7	LR8-66HGD-xxxM*	IEC/UL
		LR8-66HGD-xxxM* (Ice-Shield)	IEC/UL
		LR8-66HGD-xxxM* (Phoenix)	IEC/UL
		LR8-66HGD-xxxM* (HydroClear)	IEC/UL
	Hi-MO9	LR8-66HYD-xxxM*	IEC/UL
		LR8-66HYD-xxxM* (Ice-Shield)	IEC/UL
		LR8-66HYD-xxxM* (Phoenix)	IEC/UL
		LR8-66HYD-xxxM* (HydroClear)	IEC/UL
		LR9-66HYD-xxxM*	IEC/UL

① The "*" identifier behind the module model indicates that the height of the module frame is 30mm.

Safety



- This manual elaborates on installation and safety use information for PV power generating modules (hereinafter referred to as module) of LONGi Solar Technology Co., Ltd. (hereinafter referred to as LONGi). Please abide by all safety precautions in this guide and local regulations.
- Installation of modules requires professional skills and knowledge and is to be carried out by qualified personnel. Please read this manual carefully before installing and using this module. Installation personnel shall get familiar with mechanical and electrical requirements of this system. Please keep this manual readily available as reference for future maintenance or upkeep or for sales and testing or handing of modules.
- If you have any doubts, please contact LONGi customer service personnel for further interpretation.

Contents

3	1 / Introduction	
3	2 / Laws and Regulation	
4	3 / General Information	
4	3.1 Modules Identification	
5	3.2 Junction box style and wiring method	
5	3.3 Regular Safety	
6	3.4 Electrical Performance Safety	
7	3.5 Operation Safety	
8	3.6 Fire Safety	
8	4 / Installation Conditions	
8	4.1 Installation Site and Working Environment	
9	4.2 Selection of Tilt Angles	
10	5 / Mechanical Installation	
10	5.1 Regular Requirements	
10	5.2 Module Mechanical Installation	
11	5.2.1 Bolts Mounting	
12	5.2.2 Clamp Mounting	
13	5.2.3 Installation of flexible supports for modules.	
15	5.3 Installation and Mechanical Load of Bifacial Module	
18	6 / Electrical installation	
18	6.1 Electrical Performance	
18	6.2 Cables and Wiring	
19	6.3 Connector	
19	6.4 Bypass diode	
19	6.5 PID Protection and Inverter Compatibility	
20	7 / Grounding	
21	8 / Operation and maintenance	
21	8.1 Cleaning	
22	8.2 Module Appearance Inspection	
22	8.3 Inspection of Connectors and Cables	
22	8.4 Environmental requirements for modules	
22	9 / Release and execution	

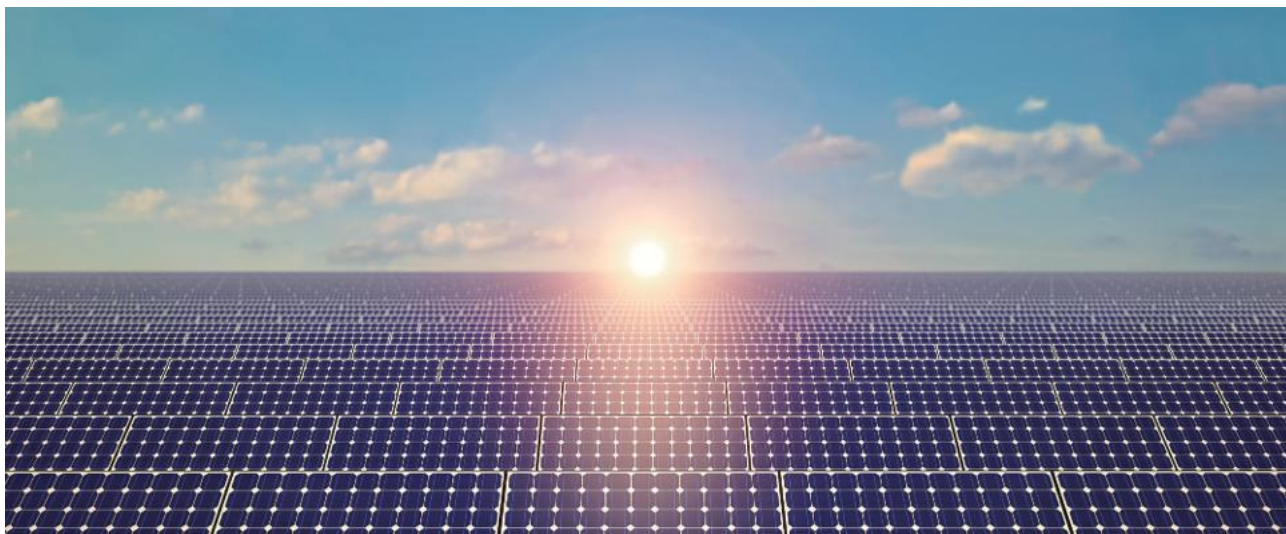
1 Introduction

Electrical and mechanical installation information will be introduced in this installation manual, so please read and understand the information before installing LONGi modules. In addition, this manual also contains important safety information that you should be familiar with. All contents in this manual are intellectual properties of LONGi which originates from long term of technical exploration and experience accumulation of LONGi.

This installation manual does not entail any explicit or implicit quality warranty and does not stipulate on compensation schemes for losses, module damages or other costs caused by or related to module installation, operation, utilization and maintenance process. When there is a dispute between the parties about the root -cause of module damage , the judgment is based on the quality standards as per contract.

LONGi will not take any responsibility if patent rights or the third party rights are infringed by use of modules. LONGi reserves the rights for modifying product manual or installation manual without advanced notice. It is recommended to visit our website regularly at www.longi.com for the latest version of this installation manual.

If customers fail to install modules as per requirements set forth in this manual, the limited warranty provided for customers will be invalid. In addition, suggestions in this manual are to improve safety of module installation, which are tested and proved through years of experience. Please provide this manual to PV system users for reference and inform the advises on operation, maintenance requirements etc.



2 Laws and Regulation

The mechanical and electrical installation of photovoltaic modules should comply with national laws, local regulations and industry standards, including the requirements of the Safety Production Law, Environmental Protection Law, national standards and electricity specifications, to ensure the human safety of people and the photovoltaic module system. The specific implementation standards are mainly based on the requirements of the authority where the project is located.

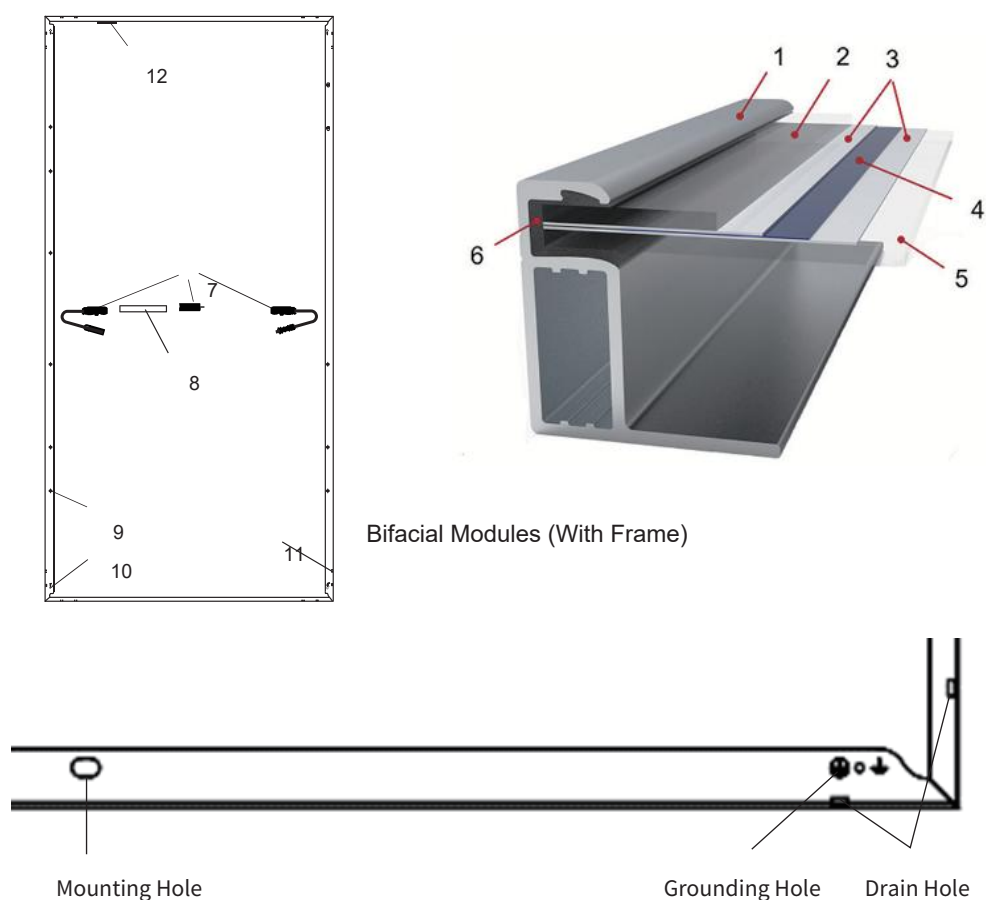
3 General Information

3.1 Modules identification

Three labels on the module contain the information below:

1. Nameplate: product type, rated power, rated current, rated voltage, open circuit voltage, short circuit current under testing conditions, certification indicator, maximum system voltage, etc.
2. Serial Number label: A unique serial number which is laminated inside the module permanently which can be found in the front of the module. There is another same serial number beside the module nameplate.

The LONGi PV module products will be categorized and identified based on their rated current, and will be labeled with current classification marking on the module nameplate or serial number label on the frame for differentiation. (H indicates High, M indicates Medium, L indicates Low)



1	Frame	2	Front Glass	3	EVA/POE	4	Solar Cell
5	Back Glass	6	Sealant	7	Junction Box	8	Name Plate
9	Mounting Holes	10	Grounding Holes	11	Drain Holes	12	Bar Code

Figure 1 Typical Modules Mechanical Drawing of Bifacial Modules, Frame details

(Please refer to section 3.2 for the location of the junction box. The specific version is subject to the corresponding specification.)

3.2 Junction box style and wiring method


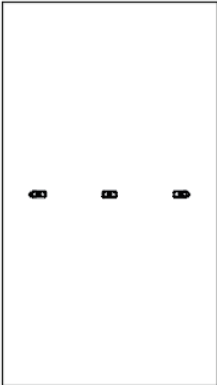
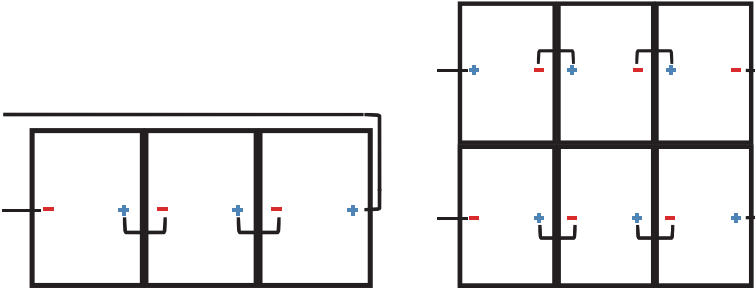
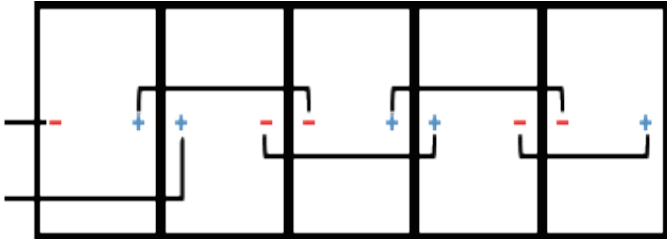
Junction Box Location	Recommended Wiring Method
	<p>Portrait Installation: Standard Cable length</p>  <p>Note: The extra extended cable is required for connection at the turn-back corner of wiring as shown below.</p>
	<p>Portrait installation:</p> 
	<p>Landscape Installation</p> 

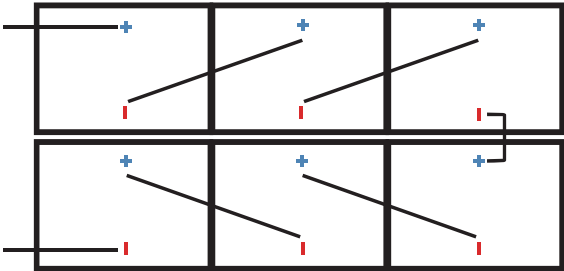Figure 2 Junction Box Style and Wiring Method



The application level of LONGi Solar module is Class II, which can be used in systems operating at > 50 V DC or >240 W, where general contact access is anticipated;

When the modules are for rooftop application, it is necessary to take the overall fire rating of the finished structure as well as operation and maintenance into account. The roofing PV system shall be installed after being evaluated by construction experts or engineers and with official analysis results for the entire structure. It shall be proved capable of supporting extra weight of system racking structures and PV modules.

For your safety, please do not work on the roof without required safety PPE(Personal Protective Equipment) which includes but not limited to fall protection, ladder or stair and personal protective measures.

For your safety, please do not install or handle modules in unsafe conditions including but not limited to strong wind or gust, damp or sandy roofs.



3.4 Electrical Performance Safety

PV modules can produce DC current under sunlight. Any contact of exposed metal at module's wiring parts may result in electrical shock or burn. Any contact of 30V or larger DC Voltage can be fatal.

In case of no connected load or external circuits, modules can still produce voltage. Please use insulation tools and wear Insulating gloves when operating modules in the sunlight.

No switch is on the PV modules. Operating of PV modules can only be stopped when they are kept from sunlight or covered by hard board or UV-proof materials.

To avoid electric arc or electric shock hazards, please do not break down electric connection in loaded conditions. Incorrect connections will also lead to electric arc or shock. Keep connectors dry and clean and make sure that they are in good operating condition. Do not insert other metals into the connectors or carry out electric connection by whatever means. Snow, water or other reflective medium in surrounding environments that intensify light re-flection will increase output current and power. And module voltage and power will increase under low temperature condition.

If module glass or other sealing materials are damaged, please wear PPE(personal protective equipment) and then isolate modules from the circuit.

Do not operate when modules are wet unless you wear PPE(personal protective equipment). Please follow the cleaning requirements in this manual when cleaning modules.

The connector can not contact with the following chemicals: gasoline, peppermint balm, and medicated massage oil, temperature oil, Engine oil (such as KV46), Grease (such as Molykote EM-50L), Lubricating oil, Rust-proof oil, Stamping oil, Diesel, Cooking oil, Acetone, alcohol, release agent (such as Pelicoat S-6), adhesive sheets that can generate oxime gas and potting glue (such as KE200, CX-200, chemlok), TBP, cleaning agent etc, amides and esters substances from insect bodies.



3.5 Operation Safety



- Open modules outer package when installation.
- Do not damage the package and do not drop packaged modules on the ground.
- Do not exceed the indicated maximum layer limit on the packaging carton when piling modules up.
- During the reversing handling of the module, make sure that the module connector is always on the inside of rear frame to prevent the connector from being squashed.
- Before unpacking, please place the modules in a ventilated, dry, and rainproof site, avoid direct outdoor exposure and accompany with shading/rain shelter facilities. If it require a long term storage, please do not remove the original packaging and ensure that the original packaging is intact.
- Standard storage is recommended; Especially for long-term storage, standard warehouses should be used.
- Outdoor storage: waterproof facilities are required。 Associate with waterproof and moisture-proof materials. The storage environment should be kept away from water sources and weeds, and the ground should be kept dry and well drained. On rainy days, use a rain cloth to completely cover the outer packaging of the module; Remove the rainproof cloth when there is sunlight or wind to dry the outer packaging as soon as possible to avoid long-term moisture.
- Follow unpacking instructions when opening packaging carton.
- The aluminum alloy frame of the bracket or module of the photovoltaic system may has sharp edges, so the staff should wear appropriate protective clothing and safety helmets to avoid bumps or scratches to the personnel. Avoid hooks, straps, threads, and other parts that can cause stumbling on the clothing or tools you are wearing.
- Carrying modules with the junction box or wires are strictly forbidden.
- Do not stand or walk on modules.
- To avoid glass damage, heavy objects are not allowed on modules.
- Be careful when placing modules at corners in particular.
- Do not try to dismantle the module or remove nameplate or parts of modules.
- Do not paint or apply any other adhesive on modules.
- Do not damage or scratch backsheet of modules.
- Do not drill holes on the frame of module, which may reduce frame loading capacity and lead to frame corrosion and invalidation of the limited warranty provided for customers.
- Do not scratch anodic coating of aluminum alloy frame except for grounding connection. Scratch may lead to frame corrosion and reduce frame loading capacity and long-term reliability.
- Do not repair problematic modules on your own.
- During storage, transportation, and installation, it is prohibited to remove the dust-proof cap from the connectors on the modules. The dust-proof caps should only be removed when electrical connections are being made between the modules. The purpose of the dust-proof caps is to prevent foreign objects such as dust and insects from entering the connectors before installation, which could result in abnormal operation of the modules after they are connected and put into operation.



3.6 Fire Safety

Please refer to local laws and regulations before installing modules and abide by requirements on building fire protection. According to the corresponding certification standards, the fire rating of LONGi Mono-facial modules is UL Type 1 or 2 or IEC Class C, the fire rating of LONGi bifacial modules is UL Type 29 or IEC Class C.

The roof should be coated by a layer of fireproof materials with suitable fire protection rating for roofing installation and make sure that the back sheet and the mounting surface are fully ventilated.

Different roof structures and installation modes will affect fireproof performance of buildings. Improper installation may lead to the risk of fire.

If once a PV module is on fire, the inverter should be cut off urgently to reduce the spreading. Professionals should wear insulating boots and insulating gloves with corresponding protection levels, and use a photovoltaic connector removal wrench to cut off the wires connecting the terminals of the firing modules. Notify the all people to evacuate urgently, and at the same time call the fire department for help. Before waiting for the fire department to arrive, a simple extinguishing can be carried out with a dry powder or fire sand.

To guarantee roof fire rating, the distance between module frame and roof surface must be $\geq 10\text{cm}$.

Adopt proper module accessories such as fuse, circuit breaker and grounding connector according to local regulations.

Please do not apply modules in where exposed inflammable gases are nearby.

4 Installation Conditions

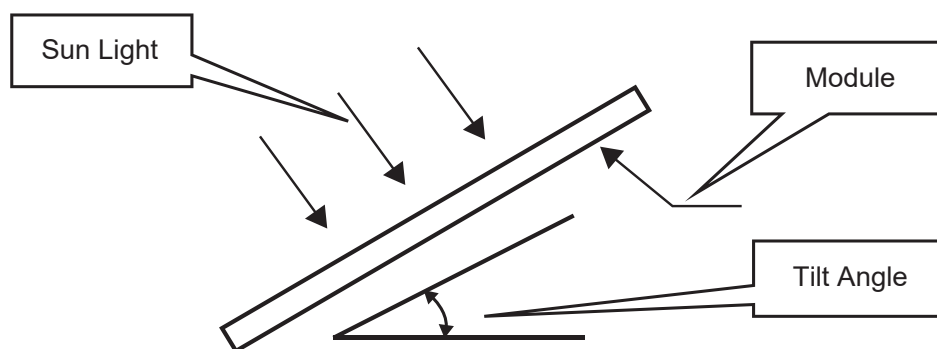
4.1 Installation Site and Working Environment

- The modules cannot be used in space.
- Do not manually focus sunlight with mirrors or magnifying glass onto modules.
- LONGi modules shall be installed on proper buildings or other appropriate places (such as ground, garage, building outer wall, roof, PV tracking system) but shall not be installed on any vehicles.
- Do not install modules at places that are possible to be flooded.
- LONGi suggests that modules be installed in the working environment with the temperature of -40°C to 40°C of which is the monthly average highest and lowest temperature of the installation sites. The extreme working environment temperature for modules is -40°C to 85°C .
- Make sure that installed modules do not suffer wind or snow pressure that exceeds the permissible maximum load limit.
- Modules shall be installed in places free from shadows throughout the year. Make sure there are no light-blocking obstacles in the installation sites.
- Carry out lightning protection for modules installed in places with frequent lightning and thunder.

- Do not install modules in places with possible inflammable gases.
- Modules cannot be used in environments with too much hails, snows, flue gas, air pollution and soot or in places with strong corrosive substances such as salt, salt mist, saline, active chemical steam, acid rain, or other substances corroding modules, affecting modules' safety or performance.
- Please take protective measures to ensure reliable and safe installation of modules in severe environments such as heavy snow, cold and strong wind or islands close to water and salt mist or deserts.
- LONGi modules passed the IEC 61701 salt spray corrosion test, but the corrosion may still occur where the modules frame is connected to the bracket or where the grounding is connected. LONGi modules can be installed ≥ 50 m away from the ocean side. The Sea-Shield modules are suitable for nearshore pile-mounted applications, typically within 10 km from the coastline and in waters less than 10 meters deep.

4.2 Selection of Tilt Angles

Tilt angle of PV modules refer to the included angle between module surface and horizontal ground. The module will obtain the maximum power output when directly facing the sunlight.



Modules are preferred to be south-facing in the north hemisphere and north-facing in the south hemisphere.

Please refer to standard modules installation guideline or suggestions from experienced PV module installer, for the specific installation angle.

LONGi suggests that tilt angle of module installation be no less than 10° , so module surface dust can be washed away easily by rainfall and frequency of cleaning can be reduced. And it is easy for accumulated water to flow away physically and avoid water mark on the glass surface which may further affect module appearance and performance.

LONGi modules connected in string should be installed with the same orientation and tilt angle. Different module orientation and tilt angle may result in different levels of solar irradiation and also power generation. In order to achieve the maximum annual generating capacity, the optimal orientation and inclination of PV modules in the installed area should be selected to ensure that sunlight can still reach to modules even on the shortest day of the year.

If LONGi modules are used in off-grid System, the tilt angle should be calculated based on seasons and irradiation to maximize the output power. If the modules output power meets the acquired load under the period of the worst irradiation in the year, the modules should be able to meet the load of the whole year. If the LONGi modules are used in grid-connected system, the tilt angle should be calculated based on the principle to maximize the yearly output power.

5.1 Regular Requirements

- Make sure that installation method and mounting structure are solid enough to meet the expected load-bearing requirement, which is requisite assurance from PV system installer. Installation bracket system shall be tested and inspected by the third party testing institution with static mechanical analysis capacity in accordance with local national standards or international standards.
- Mounting structure shall be made from durable, corrosion resistant, UV-proof materials.
- Modules shall be fixed on the bracket solidly.
- In regions with heavy snowfall in winter, adjust the height of the mounting system so that the lower edge of the module is not covered by snow. Also, in order to reduce the risk of hot spots caused by flying sand and rocks damaging the module and shading, the lowest point of the module should be at a certain height to avoid the module being blocked by weeds and shrubs growing on the ground.
- If modules are installed on brackets parallel to the roof, the minimum gap between the module frame and the roof/wall shall be 10cm which is good for air circulation to achieve better performance of module. Make sure the building is suitable for installation before installing modules on roof. Moreover, seal properly to prevent leakage.
- The module frames can encounter thermal expansion and cold contraction. So the minimum distance between two adjoining modules shall be no less than 10 mm (0.39 inch). The specific space interval can be calculated according to the actual installation tolerance and deformation of the mounting bracket.
- Ensure that the backsheet, the front and rear glass of the module will not directly touch the mounting bracket, building structure, and environmental foreign objects (such as stones), especially under the action of external force, which will cause damage to the packaging backsheet and glass, and therefore the product warranty is invalid.
- The maximum static test load that a module can withstand depends on its mounting type (refer to the mounting methods below). All loads specified in this manual are test loads.
- Note: on the basis of IEC 61215-2016 installation requirements, when computing the corresponding maximum design load, a safety factor of 1.5 need to be considered in compliance with the local laws or regulations. (Test load = design load *1.5 times safety factor)
- The modules can be installed in either landscape or portrait orientation. When installing the modules, be cautious not to block the drain hole of the frame. (* Note: In order for the modules to prevent dust accumulation, the anti-soiling modules must be mounted in portrait orientation.)

5.2 Module Mechanical Installation

Module and bracket system connection can be realized by mounting holes, clamps or embedded systems. Installation shall follow the demonstration and suggestions below. If installation mode is different, please consult LONGi customer service personnel and obtain approval. Otherwise, modules may be damaged and limited warranty will be invalid. (* Note: regarding to Anti-Soiling modules only, short edge design has applied on prevention of dust from accumulating on modules, therefore, do not install at the short edge.

For special solar farm application scenarios such as heavy wind loads, valleys and steep cliffs, the installation method needs to be reinforced, and it is recommended to use Oval Washer, Flange nuts, bolts and clamps used together, and other reinforcement installation methods. For specific enquiry, please consult LONGi's customer service.)

The underside of the lath or main shaft of the module should be smooth and free of protrusions. If protrusions cannot be avoided, the module installation should be positioned to avoid these raised areas.

It is recommended that after the Longi PV module is installed on fixed brackets, there should be no sharp objects such as screws or protruding steel plates within a 10mm range beneath the laminate component. Similarly, it is suggested that after installation on the tracking bracket, there should be no sharp objects such as screws or protruding steel plates within a 50mm range beneath the laminate component and junction box. Otherwise, it may affect the module's load-bearing capacity in outdoor environments.

Under the installation method specified in this manual, modules will have varying degrees of indentation due to gravity. Other external forces will cause additional sinking of the modules, which does not affect their normal use. Therefore, any operation on the modules should comply with the provisions of this manual.

5.2.1 Bolts Mounting

The LONGi's module has mounting holes matching M6 and M8 bolts. See Figure 3 for installation details and corresponding hole positions.

Mounting Diagram	Applicable for modules
	LR5-72HBD-xxxM* LR5-72HBD- xxxM* (磐石) LR5-78HBD-xxxM* LR8-66HGD-xxxM* LR8-66HGD- xxxM* (磐石) LR8-66HGD-xxxM* (澡雪) LR8-66HYD-xxxM* LR8-66HYD-xxxM* (磐石) LR8-66HYD-xxxM* (澡雪) LR9-66HYD-xxxM*
Note: 4000 and 790 mounting holes are used for matching with the tracking bracket system products which are from manufacturers such as NEXTracker.	

Figure 3 Installation hole positions of Modules

Apply bolts to fix modules on the bracket through mounting holes on the back-side frame. See details in Figure 4.

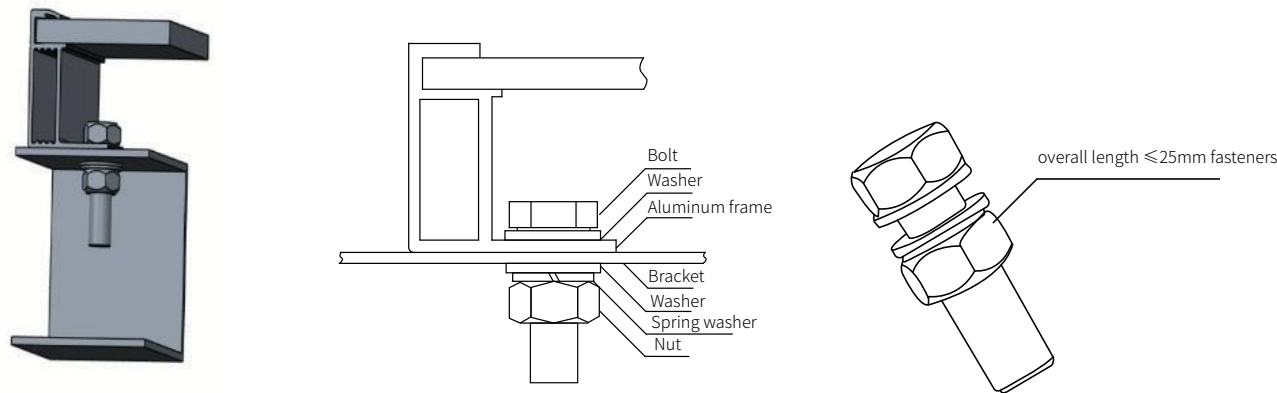


Figure 4 Bolt Installation of Modules

Recommended accessories are as below:

Accessories	Model	Material	Note
Bolt	M8	M6	Q235B/SUS304
Washer	2pcs, thickness $\geq 1.5\text{mm}$ and outside diameters=16mm	2pcs, thickness $\geq 1.5\text{ mm}$ and outside diameter = 12-18 mm	Q235B/SUS304
Spring Washer	8	6	Q235B/SUS304
Nut	M8	M6	Q235B/SUS304

- Suggestion : (1) M8 bolt tightening torque range: 12-16 N•m;
M6 bolt tightening torque range: 8-12 N•m;
- (2) When using LONGi 30 mm height frame module,(Figure 5) it is recommended to select overall length $\leq 25\text{mm}$ fasteners. (If there is a special model, consult LONGi customer service personnel).

5.2.2 Clamp Mounting

The module can be mounted by a dedicated clamp, as shown in Figure 5.

Under no circumstances should the clamp touch the glass or deform the frame. The interface of the clamp to the front of the frame must be smooth and flat to prevent frame or other components from being damaged.

Make sure that these are no shadow caused by clamps.

The drain holes of module cannot be blocked by clamps.

For framed PV module, it is recommended that the length of the clamp be at least 50mm, the clamp must maintain an overlap of 10-12 mm with the frame of the module (For clamp installation with an overlap of less than 10mm,For LR9-66HYD modules installed via hook and clamp mounting, please contact LONGi customer service for evaluation. LONGi technicians need to be consulted for assessment).

Regarding to the reference value of tightening torque, it is suggesting that for M8 bolt is 12 -16 N•m, M6 is 8 -12 N•m.

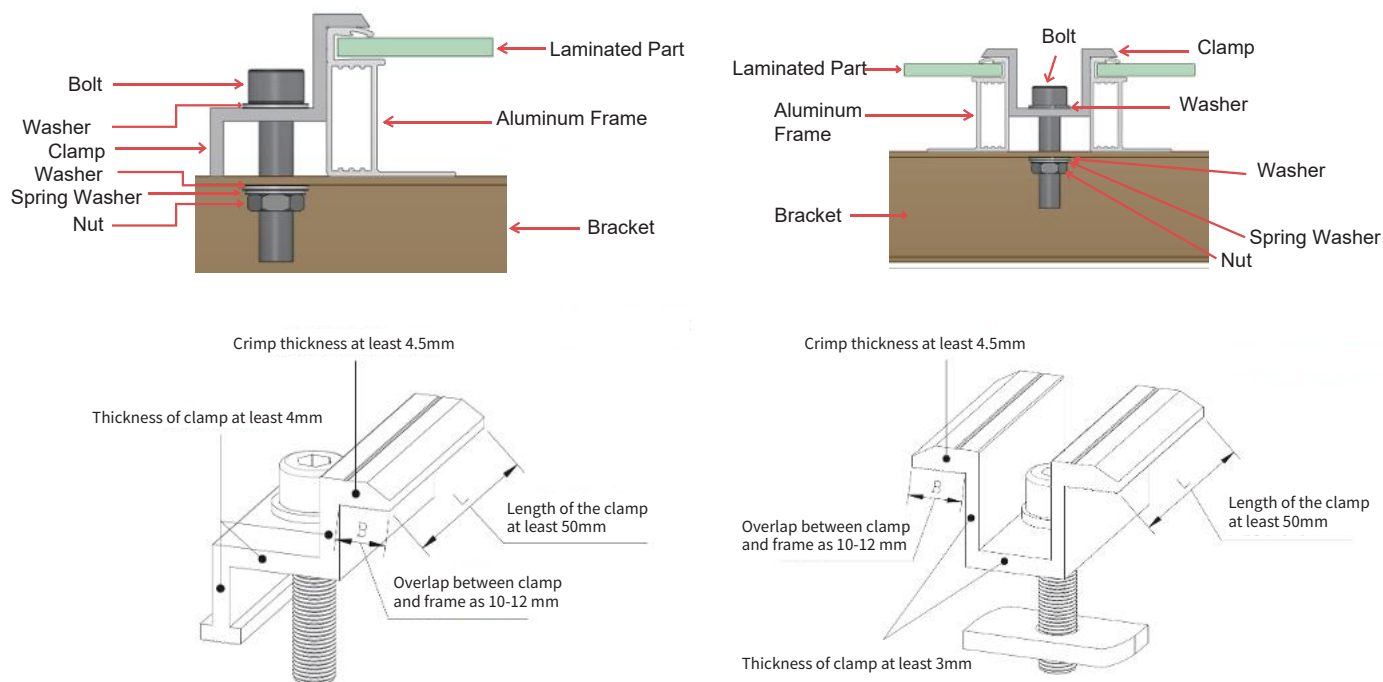


Figure 5 Clamp Installation of Modules

5.2.3 Installation of flexible supports for modules.

The Longi PV module have installation holes that match M6 and M8 bolts, as well as installation holes that are compatible with flexible support fixtures. For installation details and corresponding hole positions, please refer to figure 6.


Mounting Diagram	Applicable for modules
	LR8-66HGDxxxM* (HydroClear) LR8-66HYDxxxM* (HydroClear)
Note: The outer four holes (1350mm holes) and the 1450mm hole are used for matching installation with flexible supports.	

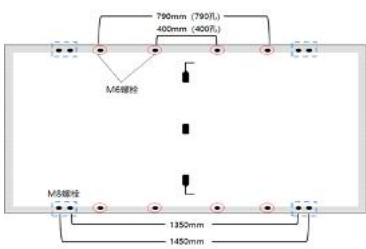Figure6 Component installation hole position diagram (for flexible supports).

By using the mounting holes on the back frame of the module, the module can be fixed to the steel cable using bolts and connection fittings. The installation details are shown in Figure 7

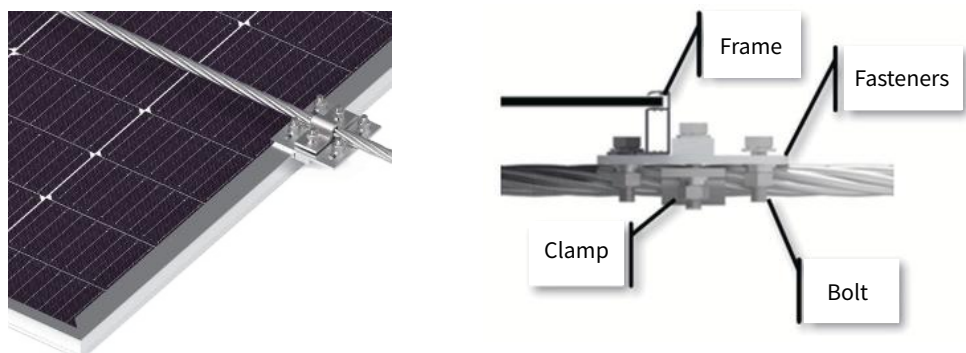


Figure 7 Illustration of Installation of Flexible Support Assembly Components

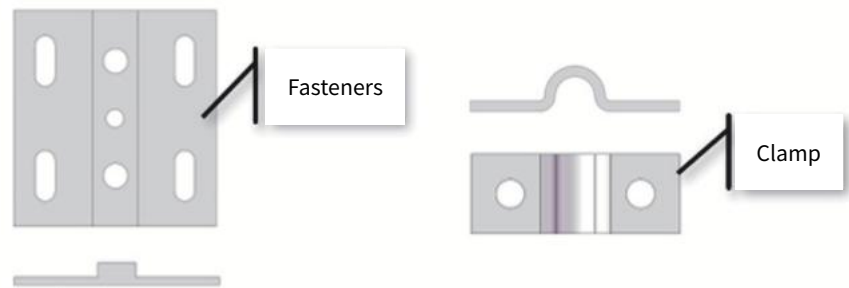


Figure 8 Flexible Support Assembly Components Installation Hardware

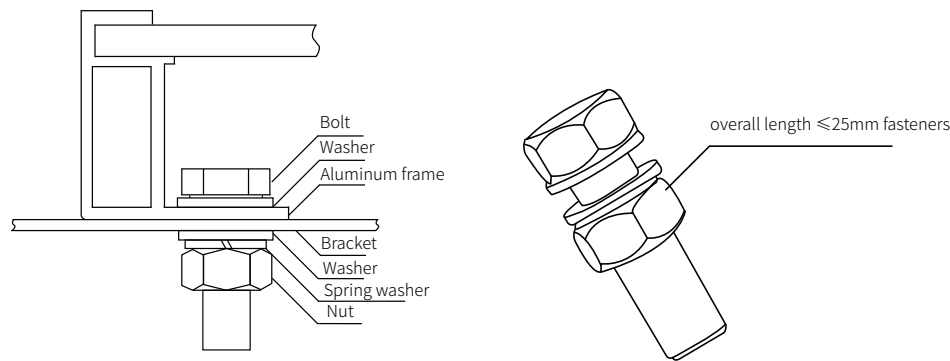


Figure 9 Bolt Installation Kit

Recommended accessories are as below:

Accessories	Model	Material	Note
Bolt	M8	Q235B/SUS304	Accessories material selection should be based on application environment.
Washer	2pcs, thickness ≥ 1.5 mm and outside diameter ≈ 16 mm	Q235B/SUS304	
Spring Washer	8	Q235B/SUS304	
Nut	M8	Q235B/SUS304	
Fastener	4x95x100mm	6005-T6	Recommended overall dimensions (Excluding Rib Height).
Band clamp	4x30x80mm	6005-T6	Recommended overall dimensions (Excluding Mounting Height)

Suggestion 1: M8 bolt tightening torque range: 12-16 N•m

Suggestion 2: When using LONGi 30 mm height frame module, (Figure 9) it is recommended to select overall length ≤ 25 mm fasteners. (If there is a special model, consult LONGi customer service personnel).

5.3 Installation and Mechanical Load of Bifacial module

Bifacial modules can be mounted by bolts or clamps. The mounting method and maximum test load are shown as follow.
(The unit of distance and length in the table below is millimeter (mm), and the unit of pressure is Pascal (Pa)).

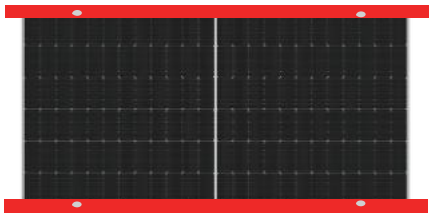
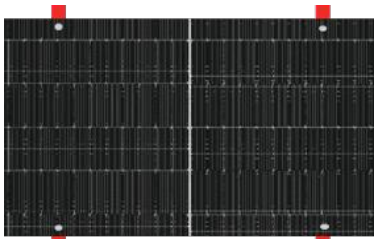
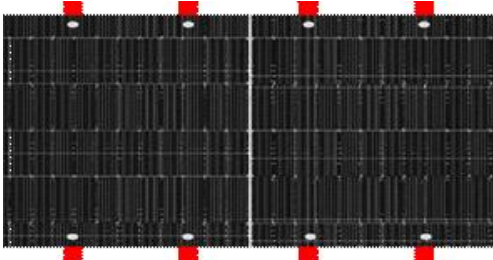
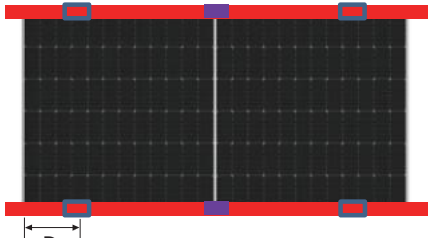
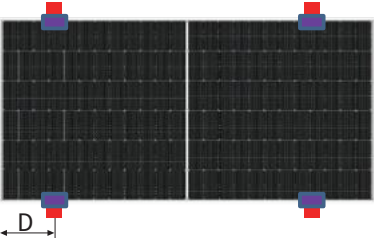
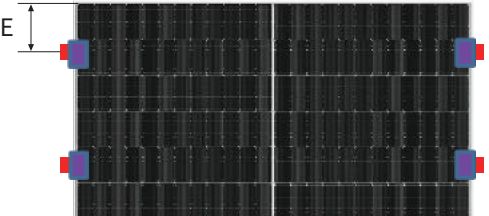
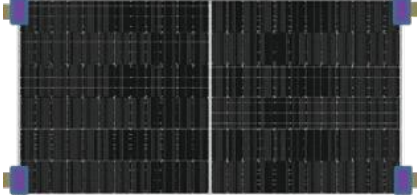
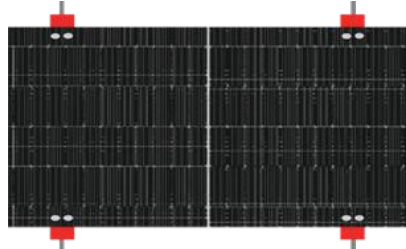
 <p>Outer four-hole bolts mounting(Method ①) Mounting rails parallel the long frame.</p>	 <p>Outer four-hole bolts mounting(Method ②) Mounting rails cross the long frame.</p>
 <p>400-hole + outer four-hole bolts with oval gaskets (Method ③) Mounting rails cross the long frame.</p>	
 <p>Clamps mounting(Method ④) Mounting rails parallel the long frame.</p>	 <p>Clamps mounting(Method ⑤) Mounting rails cross the long frame.</p>
 <p>Clamps mounting(Method ⑦) Mounting rails cross the short frame.</p>	 <p>Clamps are mounted at the corners of short frame.(Method ⑧) (clamp length $\geq 60\text{mm}$, the overlap of clamp and frame $\geq 10\text{mm}$).</p>
 <p>Installation of dual-hole flexible supports (steel cables perpendicular to the long side frame)(Method ⑨)</p>	

Figure 10 Bifacial Module Installation Position

Mechanical loads information of 66/72/78-cells with framed bi-facial dual glass modules:

<div> <div>Installation Method</div> <div>Module Type</div> </div>		Bolts Mounting		Clamps Mounting			
		Mounting rails cross the long frame	Mounting rails parallel the long frame	Mounting rails cross the long frame		Mounting rails parallel the long frame	
		Outer Four-hole	Outer Four-hole	$450 \leq D \leq 550$	$500 \leq D \leq 600$	$450 \leq D \leq 550$	$500 \leq D \leq 600$
		Method②	Method①	Method⑤		Method④	
66/72/78-cell Framed Bifacial Module	LR5-72HBD-xxxM*	+ 5400, -2400	+ 3600, -2400	+ 5400, -2400	/	+ 3600, -2400	/
	LR5-78HBD-xxxM*	+ 5400, -2400	+ 3600, -2400	/	+ 5400, -2400	/	+ 3600, -2400
	LR8-66HGD-xxxM*	+ 5400, -2400	+ 3600, -2400	/	+ 5400, -2400	/	+ 3600, -2400
	LR8-66HGD-xxxM* (HydroClear)	+ 5400, -2400	/	/	+ 5400, -2400	/	/
	LR8-66HYD-xxxM*	+ 5400, -2400	+ 3600, -2400	/	+ 5400, -2400	/	+ 3600, -2400
	LR8-66HYD-xxxM* (HydroClear)	+ 5400, -2400	/	/	+ 5400, -2400	/	/
	LR9-66HYD-xxxM*	+ 5400, -2400	/	/	+ 5400, -2400	/	/

The load information for the 66/72 version framed double-sided double-glass anti-hail module is as follows:

<div> <div>Installation Method</div> <div>Module Type</div> </div>		Bolts Mounting		Clamps Mounting			
		Mounting rails cross the long frame		Mounting rails parallel the long frame	Mounting rails cross the long frame		Mounting rails parallel the long frame
		Outer Four-hole	400 hole + outer four-hole	Outer Four-hole	$450 \leq D \leq 550$	$500 \leq D \leq 600$	$450 \leq D \leq 550$
		Method②	Method③	Method①	Method⑤		Method④
66/72 version framed double-sided double-glass anti-hail module	LR5-72HBD-xxxM* (Ice-shield)	+ 5400, -2400	± 5400	+ 3600, -2400	+ 5400, -2400	/	+ 3600, -2400
	LR8-66HGD-xxxM* (Ice-shield)	+ 5400, -2400	± 5400	+ 3600, -2400	/	+ 5400, -2400	+ 3600, -2400
	LR8-66HYD-xxxM* (Ice-shield)	+ 5400, -2400	± 5400	+ 3600, -2400	/	+ 5400, -2400	+ 3600, -2400

LONGi bifacial modules can be matched with the mainstream bracket systems in the industry. The matching test load is as follows (for other bracket systems matching information which are not specified or included in the table below, please consult LONGi customer service personnel).

Module Type	Compatible Support Brackets	Mounting Hardware	Test Load (Pa)
LR8-66HGD-xxxM* LR8-66HYD-xxxM*	NEXTracker (1.3mm) NX Horizon (1P)	Short Rail V2.4 4×bobtails (M6 head O.D. 16.8 mm) 400mm hole	±2100
		V2.4 790mm rail 4×bobtails (M6 head O.D. 16.8 mm) (790mm holes position)	+2700, -2100
LR9-66HYD-xxxM	NEXTracker (2.0mm) NX Horizon (1P)	Short Rail V2.4 4×bobtails (M6 head O.D. 16.8 mm) 400mm hole	± 1800
		V2.4 790mm rail 4×bobtails (M6 head O.D. 16.8 mm) (790mm holes position)	± 1900
LR5-72HBD-xxxM*	NEXTracker (2.0mm) NX Horizon (1P)	Short Rail V2.4 4×bobtails (M6 head O.D. 16.8 mm) 400mm hole	±2400
		V2.4 790mm rail 4×bobtails (M6 head O.D. 16.8 mm) (790mm holes position)	+3000, -2400
LR5-72HBD-xxxM* (Ice-shield)	NEXTracker (2.0mm) NX Horizon (1P)	Short Rail V2.4 4 × bobtails (M6 head O.D. 16.8 mm) 400mm hole	± 2400
		V2.4 790mm rail 4 × bobtails (M6 head O.D. 16.8 mm) (790mm holes position)	+3000, -2400
		V2.4 400mm rail 4 × bobtails (M6 head O.D. 16.8 mm) (400mm holes position+1400 Support Beam)	± 3600
		V2.4 790mm rail 4 × bobtails (M6 head O.D. 16.8 mm) (790mm holes position+1400 Support Beam)	± 3600
LR8-66HGD-xxxM* (Ice-shield) LR8-66HYD-xxxM* (Ice-shield)	NEXTracker (2.0mm) NX Horizon (1P)	Short Rail V2.4 4×bobtails (M6 head O.D. 16.8 mm) 400mm hole	± 2100
		V2.4 790mm rail 4×bobtails (M6 head O.D. 16.8 mm) (790mm holes position)	+2700, -2100
		V2.4 790mm rail 4 × bobtails (M6 head O.D. 16.8 mm) (790mm holes position+1400 Support Beam+bumper)	± 3600

LONGi's special modules for flexible racking can be matched and installed with industry flexible racking systems, and the matching test loads are as shown in the following table (for other unspecified bracket systems and LONGi products, please consult LONGi's customer service personnel)

Module Type	Compatible Support Brackets	Mounting Hardware	Test Load (Pa)
LR8-66HGD-xxxM*(HydroClear) LR8-66HYD-xxxM*(HydroClear)	Flexible racking	Two-cable flexible racking: M8 Bolt + spring washer 1350mm +1450mm hole position	+3600, -2400

Note: The above data is based on the static load requirements of IEC61215 standard (Tested by LONGi or third party certification institution).

6 Electrical installation

6.1 Electrical Performance

There are tolerances between the rated values of the electrical performance under STC and measured values. Including I_{sc} , V_{oc} and P_{max} under STC (1000 W/m² Irradiance, a cell temperature of 25 °C and an AM1.5).

When modules are in series connection, the string voltage is sum of every individual module in one string. When modules are in parallel connection, the current is sum of the individual module as shown in below figure 11. Modules with different electric performance models cannot be connected in the same string.

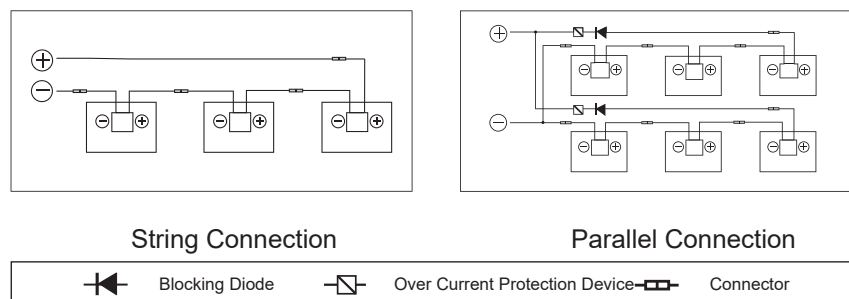


Figure 11 Series Connection and Parallel Connection Circuit Diagram

The maximum allowed quantity of modules in string connection shall be calculated according to relative regulations. The open circuit voltage value under the expected lowest temperature shall not exceed the maximum system voltage value allowed by modules and other values required by DC electric parts. (LONGi modules maximum system voltage is DC1000V/DC1500V---actually system voltage is designed based on the selected module and inverter model.)

The correction value of VOC can be calculated by the following formula.

$$C_{Voc} = 1 - \beta V_{oc} \times (25 - T)$$

T: The expected lowest temperature of the installation site.

β : VOC temperature coefficient (% / °C) (Refer to module datasheet for further detail)

If there has reverse current exceeding the maximum fuse current flowing through the module, use overcurrent protection device with the same specifications to protect the module. If quantity of parallel connection is more than 2, there must be an overcurrent protection device on each string of module.

6.2 Cables and Wiring

PV Module's junction boxes with the IP68 protective level, can provide the safety protection for cable and wiring connection, also for contact protection of non-insulating electric parts. Each module has two individual wires connecting the junction box, one is negative pole and the other is positive pole. Two modules can be in series connection by inserting the positive pole at one end of wire of one module into the negative pole of the adjoining module.

According to local fire protection, building and electrical regulation, apply proper cable and connector; ensure the electrical and mechanical property of the cables (the cables should be put in a catheter with anti-UV aging properties, and if exposed to air, the cable itself should have anti-UV aging capability). For rooftop projects, it is important to utilize support and fixation measures to prevent module cables from hanging on the ground or the rooftop, ensuring the safety and durability of the cables.

The installer can only use single-wire cable, $\geq 4\text{mm}^2$ (12 AWG), 90 °C, with proper insulation capability to withstand the maximum open circuit voltage (such as IEC62930). Need to select appropriate wire specifications to reduce voltage drop.

LONGi requires that all wiring and electrical connections comply with the appropriate National Electrical Codes.

When cables are fixed on the bracket, avoid mechanical damaging cables or modules. Do not press cables by force. Adopt UV resistant cable ties and clamps to fix cables on the bracket. Though cables are UV resistant and water proof, it is still necessary to prevent cables from direct sun light and water immersion.

The minimum allowed bending radius of cables should be 43mm. (1.69 inch). Cable routing method is shown in Figure 12.

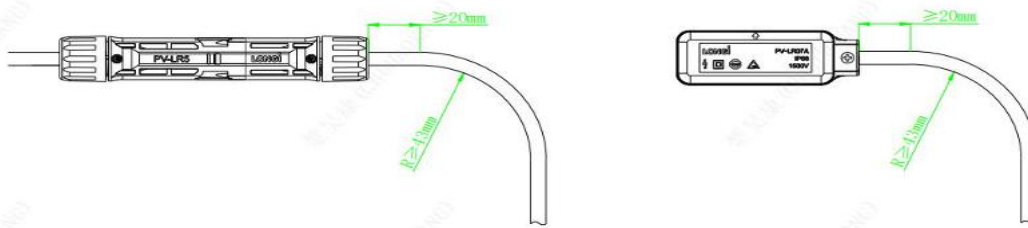


Figure 12 Junction Box Cable Routing

6.3 Connector

Please keep connectors clean and dry. Make sure connector caps are fastened before connection.

Avoid foreign objects such as moisture, dust, and organisms from entering the connector, which may cause the connector to fail to work properly or be damaged.

If the connector is wet, it is forbidden to connect.

If the connector is contaminated, it is forbidden to connect it.

If the connector is not connected positive with negative, the connector is not waterproof.

The components need to be connected as soon as possible after installation, and the connectors should meet the requirements of IP68 (IEC60529) after the connection. If the connector cannot be connected on time or the installation place is rainy and foggy, it is recommended to add a connector protection device.

Avoid connectors from direct sun light and water immersion.

Avoid connectors falling onto ground or roof. Incorrect connection may lead to electric arc and electric shock. Please make sure that all electric connection is reliable. Make sure all connectors are fully locked.

Do not connect different connectors (brand and model) together.

6.4 Bypass diode

LONGi module junction box contains bypass diode which is in parallel connection with the cell string. If hot spot occurred, the diode will come into operation to stop the main current from flowing through the hot spot cells in order to prevent module over-heated and performance loss. Note, a bypass diode is not the overcurrent protection device.

If the diode is definite or suspected to be defective, the installer or system maintenance supplier shall contact LONGi.

Please do not try to open the module junction box on your own.



6.5 PID Protection and Inverter Compatibility

LONGi PV modules pass the most stringent PID tests before leaving the factory, and the negative electrode of the module usually does not need to be grounded, so it can be compatible with isolated (with transformer) or non-isolated inverters.

- ① PV modules may appear Potential Induced Degradation (PID) under high humidity, high temperature and high

voltage condition. Modules may appear Potential Induced Degradation (PID) under the conditions below:

- ◇ PV modules install under hot and humid weather condition.
 - ◇ PV modules installation site is under long-term humid environment such as water floating application.
- ② To reduce the risk of PID, on the modules DC connection site, it is recommended to connect the negative to ground. The PID protection measures on system level are recommended as follow.
- ◇ For isolated PV inverter, it is recommended to use the negative electrode potential lift scheme (PV/PE), the AC voltage neutral point potential lift scheme (N/PE) or the reverse bias recovery scheme.
 - ◇ For non-isolated PV inverter, isolated transformer is needed to be equipped before applying virtual grounding method for inverter.

7 Grounding

In design of modules, the anodized corrosion resistant aluminum alloy frame is applied for rigidity support. For safety consideration and to protect modules from lightning and electrostatic damage, the module frame must be grounded. The grounding device must be in full contact with inner side of the aluminum alloy and penetrate surface oxide film of the frame. Do not drill additional grounding holes on module frame.

The grounding conductor or wire may be copper, copper alloy, or any other material acceptable for application as an electrical conductor per respective National Electrical Codes. The grounding conductor must then make a connection to

There are grounding holes with the diameter of Ø4.2 mm at the edge location of module's back-side frame. The grounding hole on the frame is marked with typical grounding symbol ($\equiv$) according to IEC 61730-1 standard, which can only be used for grounding, not for module installation.

Grounding between modules shall be confirmed by qualified electricians and grounding devices shall be manufactured by qualified electric manufacturer. Copper wires shall not be crushed during installation.



The following is one of the recommended grounding methods of LONGi modules:

- ◆ Pass the grounding bolts at both ends of the grounding wire through the grounding holes of adjacent modules respectively.
- ◆ Fit the serrated washers onto the grounding bolts with the serrated side facing the anodized film of the module frame.
- ◆ Tighten the nuts for the grounding wire to complete installation.

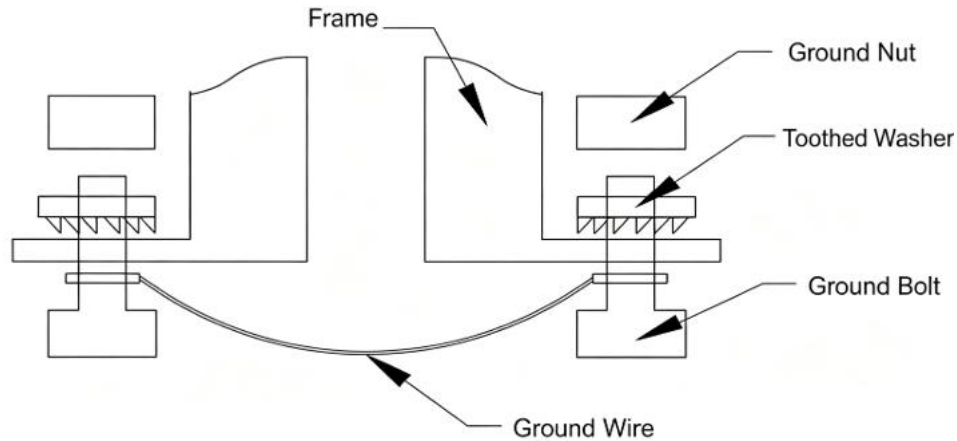


Figure 13 Bolt Grounding Method of PV Module

Mounting holes on modules that are not occupied can be used for installing grounding devices.

The third party grounding device can be used for grounding of LONGi modules but such grounding method shall be proved to be reliable. Grounding device shall be operated in line with stipulations of the manufacturer.

8 Operation and maintenance

It is the users' responsibility to carry out regular inspection and maintenance for modules, especially during the period of limited warranty. To inform the LONGi customer service personnel within two weeks when modules are found broken or other significant abnormality.

Refer to the LONGi PV Module Operation and Maintenance Manual for details on module maintenance.

8.1 Cleaning

Accumulated contaminants on module surface glass will reduce the power output and lead to local hot spot, such as dust, industrial wasted water and birds' droppings. The severity of influence is determined by transparency of wastes. Small amounts of dust will affect the intensity and evenness of received solar irradiation but are not dangerous and power will not be reduced remarkably generally.



During operation of modules, there shall be no environmental factors to shade modules fully or partially. These environment factors including other modules, module mounting system, birds dwelling, dust, soil or plants. These will significantly reduce output power. LONGi suggests that the module surface should not be shadowed in any case.

Frequency of cleaning depends on dirt accumulation speed. In normal situations, rainwater will clean the module surface and reduce the cleaning frequency. It is suggested to use sponge dipped with clean water or soft cloth to wipe the glass surface. Do not use acid and alkaline detergents to clean modules. Do not use tool with rough surface to clean in any case.

In order to avoid potential risk of electrical shock or burn, LONGi suggests cleaning the modules during early morning or evening with low irradiance and low modules temperature especially for the hot regions.

In order to avoid potential risk of electrical shock, do not try to clean the modules with glass damage or expose wires.

8.2 Module Appearance Inspection

Check module cosmetic defects with naked eyes , especially:

- ◆ Module glass cracks. Special attention: avoiding rolling up sand and gravel to break the glass during the inspection of the operation and maintenance vehicles; Avoiding defects or breakage of glass caused by splashing of hard objects such as sand and gravel when using a lawn mower for weeding operations.
- ◆ Corrosion at welding parts of the cell main grid (caused by moisture into the module due to damage of sealing materials during installation or transportation).
- ◆ Check whether there are traces of burning mark on the module back sheet.
- ◆ Check PV modules if any signs of aging including rodent damage, climate aging, connectors tightness, corrosion and grounding condition.
- ◆ Check if any sharp objects in contact with PV modules' surface.
- ◆ Check if any obstacles shading the PV modules.
- ◆ Check if any loose or damage screws between the modules and mounting system. If so, adjust and fix in time.

8.3 Inspection of Connectors and Cables

It is suggested to carry out the following preventive inspection twice a year:

- ◆ Check the tightness of the connectors and cables.
- ◆ Check if any crack or gap of silicone nearby the junction box.

8.4 Environmental requirements for modules

- ◆ Do not treat modules as unclassified urban waste. They should be collected using separate collection equipment or stored in a separate management area, kept away from light to avoid safety risks and violation of environmental requirements.
- ◆ Follow local legal requirements and have qualified organizations for harmless treatment handle the recycling process.
- ◆ If your area is already within the scope of PV Cycle's business, you can contact them for processing.

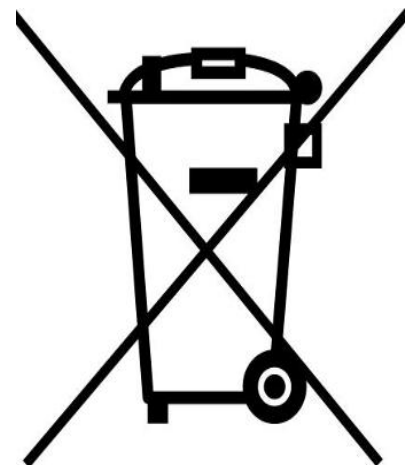


Figure 14 EU WEEE recycling marking

9 Release and execution

This document is under the centralized management of LONGi Product Management Department, and the final execution and interpretation are the responsibility of the current change requirement team.



LONGi

www.longi.com